


Uso y Precauciones

- No exponga el gamepad a altas temperaturas, alta humedad o la luz solar directa.
- No permita que líquidos ni partículas pequeñas entren en el gamepad.
- No coloque objetos pesados sobre el gamepad.
- Nunca desarme ni modifique el gamepad.
- No retuerza el cable ni tire de él con fuerza.
- No tire ni deje caer el mando ni lo someta a fuertes movimientos.
- No toque las piezas metálicas ni inserte objetos extraños en el gamepad.
- Cuando limpie el gamepad, utilice un paño suave y seco. No utilice disolventes u otros productos químicos.
- Deje de usar el gamepad inmediatamente si sufre un funcionamiento anormal.

Para obtener instrucciones de uso detalladas y el uso seguro de este producto, consulte el manual de instrucciones de la consola correspondiente.

Gamepad Revenge Wireless

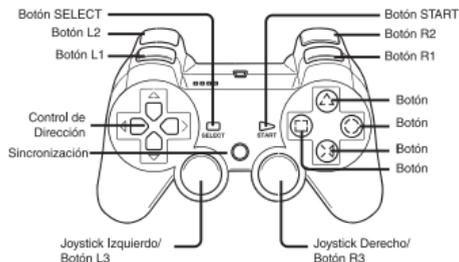

Primera Conexión

- Pulse el botón de sincronización y los cuatro LEDs parpadearán con lentitud.
- Mantenga pulsado el botón de sincronización y deje de pulsarlo cuando vea que los 4 LEDs parpadean más rápidamente.
- Inserte el receptor USB en la consola PS3.
- Vuelva a pulsar el botón de sincronización y, a continuación, uno de los cuatro LEDs mantendrá la luz sin parpadear. Ya estará conectado.

Encender y apagar el Gamepad

Con el fin de ahorrar energía y así ampliar la duración de la batería, se ha creado un modo de suspensión / reposo para el Gamepad.

- Cuando el gamepad está encendido, pero no hay ningún receptor USB, el Gamepad entrará en modo de espera en 55 segundos.
- Cuando el gamepad y el receptor USB están conectados, y no hay ninguna pulsación de botones, el gamepad entrará en modo de reposo en 10 minutos.
- Cuando el gamepad está en el modo de reposo, podemos utilizar el botón de sincronización para encenderlo.

Indicador de batería baja

Cuando el gamepad está en un nivel bajo de energía, el LED indicador de sincronización empezará a parpadear. El usuario deberá recargarlo con el cable USB incluido.

Recargar la batería

Cuando se está recargando la batería, el indicador LED parpadeará para indicar que está cargando. Cuando se carga por completo, el LED dejará de parpadear.

- Parpadeo del LED cuando no hay cable conectado -- Batería baja
- Parpadeo del LED cuando hay cable conectado -- Cargando

Reiniciar el Gamepad

Cuando el gamepad ha perdido la conexión debido a un bajo nivel de batería, o hay un mal funcionamiento, se podrá restablecer manualmente la conexión:

- 1) Conecte el cable de carga para el Gamepad.
- 2) Cargue la batería durante un periodo de tiempo (media hora o más).
- 3) Pulse el botón de sincronización.



WWW.B&BGAMING.ES


REVENGE

WIRELESS GAMEPAD

USER MANUAL

BE THE GAME.

Gamepad Revenge Wireless

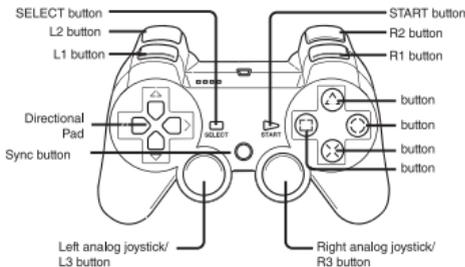

Use and Handling Precautions

- Do not expose the gamepad to high temperatures, high humidity or direct sunlight.
- Do not allow liquid or small particles to get inside the gamepad.
- Do not put heavy objects on the gamepad.
- Never disassemble or modify the gamepad.
- Do not twist the cable or pull it forcibly.
- Do not throw or drop the gamepad or subject it to strong physical shock.
- Do not touch the metal parts or insert foreign objects into the gamepad.
- When cleaning the controller, use a soft, dry cloth. Do not use solvents or other chemicals.
- Stop using the gamepad immediately if it performs abnormally.

For detailed usage instructions and safe use of this product, refer to the appropriate console instruction manual.

Low Battery Indication

When the controller is in low power, the LED of sync will blink. The user should charge the rechargeable battery with the USB cable included.

Charging and Indication

When using with rechargeable battery, the LED to indicate the existing port will blink which indicates it is charging status. When it is charged full, the LED will constantly ON.

- LED blink when there is no charging cable connected ---Low battery
- LED blink when there is charging cable connected ---Charging Indication

Reset

When the controller has been lost connection due to the very low battery, or there is malfunction, it might be manually reset the controller:

- 1) Connect the charging cable to the Controller.
- 2) Charge the controller for a certain period of time (half an hour or more).
- 3) Press the sync button.

First Connection

- Press sync button and the four LEDs will blink with slow speed
- Press and sync button and release only after seeing the four LEDs blink fast
- Insert the USB receiver to the PS3 console
- Press sync button again, and then you can see one of the four LEDs should be ON, which indicates you are in corresponding port.

Sleep and Wake up

In order to save the power thus to enlarge the battery life, the sleep Mode is designed.

- When the controller is power ON, but there is none dongle, the gamepad will enter sleep mode in 55 seconds
- When the controller and the dongle has been built the connection, and there is none key press for the controller, it will enter sleep mode in 10 minutes.
- When the controller is in sleep mode, we can use the sync button to wake it up.



WWW.BSGAMING.EG